

*Burton in Lonsdale Village Hall  
Registered Charity 505943*

**Procedure to use microphones**

- 1. Microphones in kitchen cupboard, lock code provided to booker**
- 2. Plug in power to amplifier in kitchen---above left work surface**
- 3. Plug cable(s) in to table mike(s) and jack(s) in socket(s)  
Wandering mike cable plugs directly into jack**
- 4. To use wireless mike, plug receiver unit jack into the digital input digibox, and the latter into the wall socket. Switch this digibox on**
- 5. Music can also be input via the digibox**
- 6. Switch on wireless mike and receiver unit (AA batteries)**
- 7. Reverse procedure, and lock equipment in cupboard**

